


### Horn Ring controls :

In order to utilize the Horn Ring switch features of the siren, the following procedure must be performed.

1. Locate the wire that connects the vehicle horn ring switch to the horn or horn relay. Cut this wire.

2. See figure below. Splice the wire. [http://ww2.justanswer.com/uploads/s420/2010-01-26\\_231633\\_97\\_CV\\_Horn\\_wiring\\_diagram.jpg](http://ww2.justanswer.com/uploads/s420/2010-01-26_231633_97_CV_Horn_wiring_diagram.jpg)

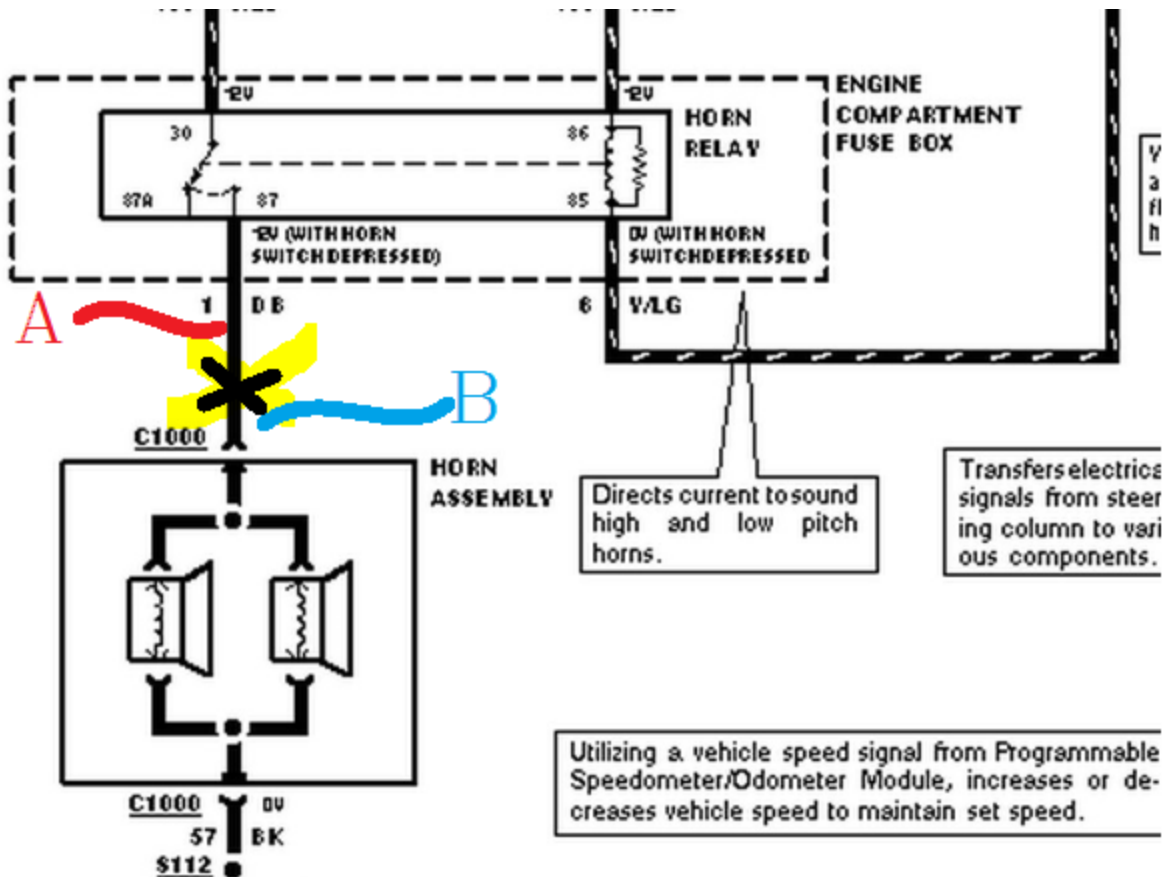


See the original diagram for Ford Crown Victoria wiring diagram link below.

[http://ww2.justanswer.com/uploads/s420/2010-01-26\\_231633\\_97\\_CV\\_Horn\\_wiring\\_diagram.jpg](http://ww2.justanswer.com/uploads/s420/2010-01-26_231633_97_CV_Horn_wiring_diagram.jpg)

Cut the "X" (yellow highlighted) and connect **A** (as shown in the above) to Horn Ring In and **B** to Horn Ring Out.

3. Use the jumper in HR selection(see below) to choose either "siren" or "airhorn" button control with the horn ring switch.

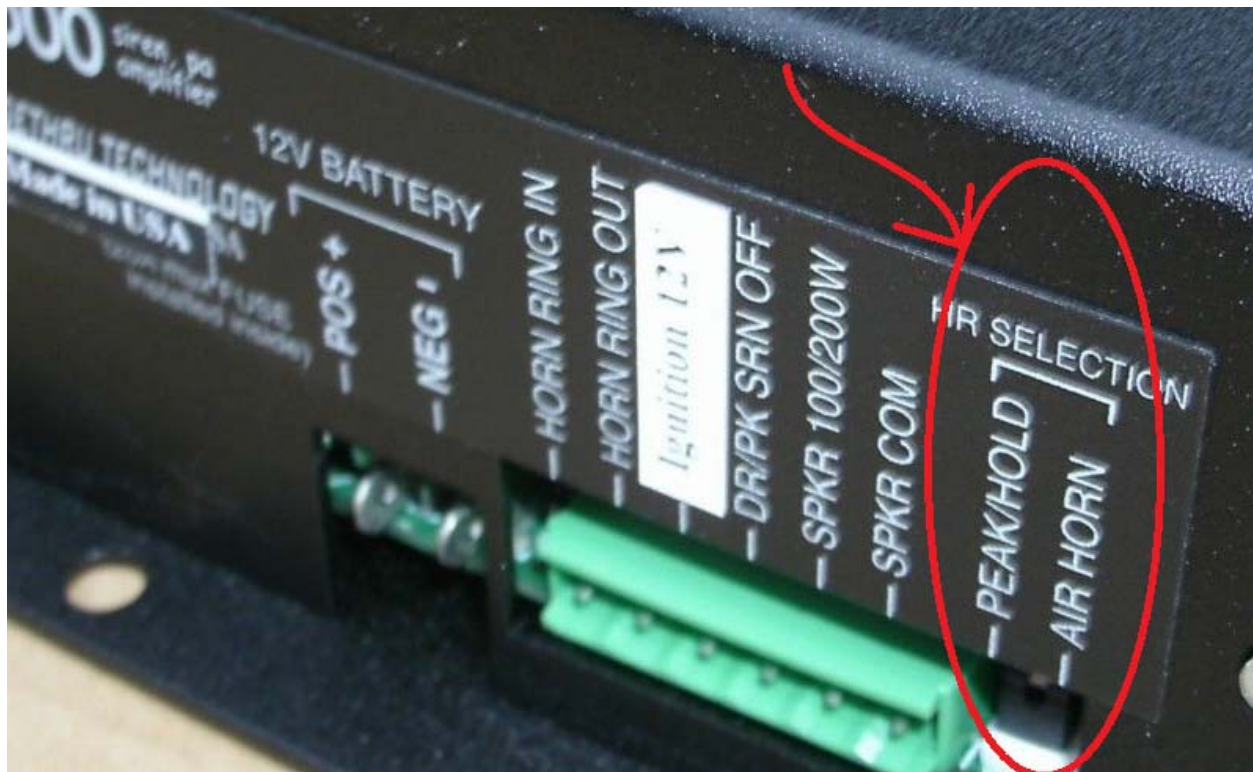

DR/PK SRN OFF controls:

Connect this input to a ground signal to kill siren tone instantly. The transmission gear in park can be used or door opening for a ground triggering signal to disable the siren. Depressing siren button twice will disable siren immediately too.